



MODEL ROUTER, ITEM MR20
Parts List

REF. NO.	PART NO.	DESCRIPTION	QTY
1	A503	Bottom Plate	1
2	X119	Power Outlet	1
3	X143	Power Inlet with Fuse Holder	1
4	A513	Motor Bracket	1
5	A500	Motor, 1/8 HP, 4000 RPM	1
6	A504	Washer 1/4"	4
7	A501	Socket Screw 1/4-20 x 1/2"	4
8	X265	Screw 8/32 x 5/16", Rd Hd Phillips	8
9	A515	Bridge Rectifier	1
10	A521	Screw 8/32 x 5/8", Rd Hd Phillips	1
11	A516	Spacer 5/16" OD x 1/4" Thick for #6 Screw	2
12	A517	Kill Switch	1
13	A518	Screw 6/32 x 1-1/4", Rd Hd Phillips	2
14	A510	Plastic Cover	1
15	A519	Lighted Rocker Switch	1
16	A514	Washer #8	9
17	A506	Collet 1/4"	1
18	A507	Collet Draw Nut	1
19	A512	Post 2-3/16"	2
20	A502	Top Plate with Connector, S/S	1
21	A511	Screw 8/32 x 3/8", Flat Hd Socket	2
22	A509	Safety Shield	1
23	W006	Screw 8/32 x 3/8", Rd Hd Phillips	6
24	M258	Rubber Foot	4