

“Just one is enough”

W5 Max

The 5-axis milling machine for dry and wet milling



✓ All materials available

- Titanium discs
- Glass ceramic
- Zirconia
- Composite Resin
- CoCr
- Pre-milled blank
- PEEK
- PMMA
- Wax

✓ Automatic disc changer

✓ Industrial grade automatic calibration



Non-stop machining

Increase the efficiency of equipment and reduce the time spent by disc changing.

Automatic disc changer

✓ 8-slot

✓ RFID identification system

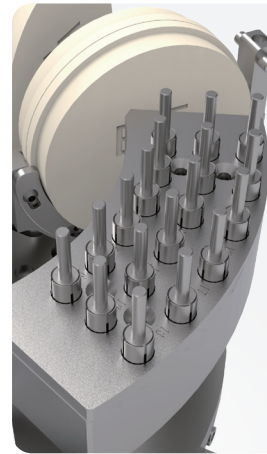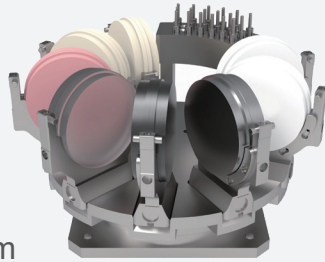

18 tools

✓ Automatic changing tools module

✓ Tool life monitoring

Just one is enough

One machine can process all materials.

3 kW
62mm



Water cooling

✓ **Ioniser module**

Equipped with an ioniser, the system automatically activates when processing resin materials to eliminate static electricity from debris.

✓ **Zero-point clamp system**

Achieve stable and fast disc change.

✓ **Servo motors**

Offer precise control, fast response, and high precision.

✓ **Two-point support holder**

Give the equipment stronger rigidity and greater processing angle and degree of freedom.



No need manual calibration


W5 MAX is equipped with an **industrial-grade probe head**. It is integrated into the machine's working chamber and is capable of setting the automatic calibration frequency, enabling the calibration of each axis and automatic compensation within the system based on the calibration results.

Furthermore, the probe is capable of locating prefabricated materials, such as premills, to guarantee precision during milling.




DEPRAG (Zhengzhou) Dental Technology Co., Ltd.

Email : info@depragdental.com

 Instagram: [deprag.dental](https://www.instagram.com/deprag.dental)

 Facebook: [deprag](https://www.facebook.com/deprag)

Web : depragdental.com

 YouTube: [deprag3151](https://www.youtube.com/channel/UCdeprag3151)